For service, contact the store where you purchased the device.

Instructions for use

Gabbiano Head Spa Wash 050



Rev. A/09/2025

Assembly:

1. Carefully remove the washer from its packaging.
2. Check that all components are complete and undamaged.
3. Connect the water inlet and outlet connections to the appropriate valve.



4. Make sure that the voltage and parameters of the electrical system correspond to the requirements of the device.
5. Plug the appliance plug into an outlet.

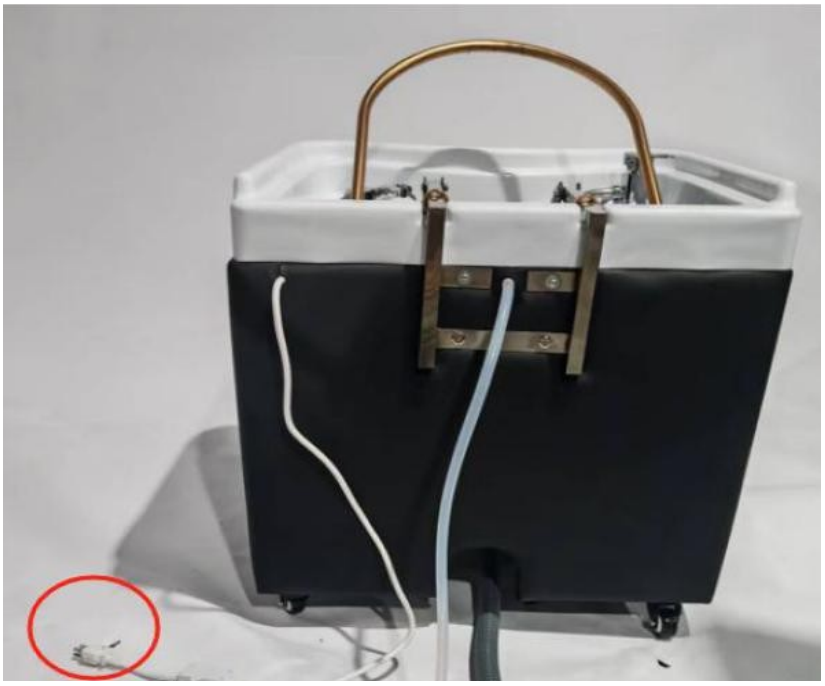

6. Fill the bowl with water to a level about 5 cm above the drain filter.

Make sure to add water to the bowl before starting the machine, otherwise the washer may be damaged. Air can easily get into the pipes, causing noise.

Control panel:



- **Spa** start- starts the water circulation.
- **Spa** mode- three levels of water flow control: **gentle (soft), comfort (comfort), strong (strong)**.
- **Temperature +** - increases the water temperature.
- **Temperature** - - decreases the water temperature.
- **Time +** - increases the water circulation time.
- **Time -** - decreases the water circulation time.
- **Light therapy start** - turns on the light, which has a disinfecting and soothing effect on the scalp.
- **Cleaning start** - starts the cleaning of the washer.

Hair sauna:

Before turning it on, add at least 300 ml of water to the device, connect it with a plastic tube to the washer, then set the appropriate temperature and operating time, and put the steam dome on the bowl. Be careful that the water in the device does not evaporate completely, as this can cause damage to it.





Time adjustment

Steam adjustment

Caution.

1. Check that the voltage matches the specifications of the appliance.

2. Do not use your wet hand to connect or disconnect the power source.

3. Do not damage the wiring or tamper with the circuit.

4. Do not use a wet cloth to clean the power switch, plug and other electrical parts of the machine

6. Ensure that children do not play near the washer without adult supervision.

7. Do not put your hand or foot in the crevices of the washer.

8. Make sure the plug is plugged in all the way so that it is fully inserted into the outlet, otherwise it may cause electric shock or fire due to overheating.

9. In case of abnormality or malfunction, immediately stop using and disconnect the power supply.

10. Do not expose the washer to direct sunlight.

11. Do not push or pull the washer on an uneven floor.

12. Do not sit on the washer.

13. Do not place the unit in wet places such as the bathroom to avoid electric shock or other malfunctions. The remote control should also be protected from contact with water.

14. Do not place the device in areas where painting or varnishing work is taking place o r oxygen is being used.

15. The device should not be used by people with physical limitations, sensory impairments, mental problems or inexperience.

16. If the plug is damaged, contact your distributor, service center or qualified personnel to avoid danger.

Specifications:

Washer power:

1000W Evaporator

power: 800W

SAFETY MEASURES

1. The device is a professional equipment for use in cosmetic surgeries. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.

2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician.

3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.

4. Immediately remove the plug from the outlet and contact the authorized service in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.

5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.

6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.

7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.

8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.

9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).

10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.

2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided so that the associated risks are understood.

3. The equipment is not intended for play by children. Do not allow children to play with the equipment.

4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.

5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning waste electrical and electronic equipment

Waste electrical and electronic equipment should be collected separately, and then handed over to collection points for waste electronic and electrical equipment.

At the end of their useful life, and old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.