For service, contact the store where you
purchased the device.

INSTRUCTIONS FOR USE

Ultrasonic cleaner D-3000



Rev. A/03/2024

Technical data:

Model	D-3000
Tank capacity	450 ml
Maximum fluid level	300 ml
Dimensions of the tank	15.5 x 8.0 x 3.8 cm
Voltage	220 - 240 V 50/60 Hz
Power	35 W
Housing material	ABS
Plastic tank	Stainless steel SUS304
Vibration frequency	42 kHz
Dimensions	19.6 x 11.8 x 11.9 cm
Net weight	0.82 kg
Gross weight	1.08 kg

- Disconnect the unit before filling. Do not exceed the "MAX" line to avoid overfilling.
- Do not fill tank abrasive or corrosive chemicals. It can cause its leakage and, consequently, destruction.
- Do not use the washer if the cable or plug is damaged. If damaged, contact a service center for inspection and repair.
- Store the washer in a safe, dry and non-sunny place
- The washer should never be left unattended while plugged in.
- Do not use while bathing.
- Disconnect the washer from the power source after use.
- Do not immerse the washer in water to avoid electrocution
- Pour out the water through the place on the washer indicated by the arrow.

Washer construction and accessories:

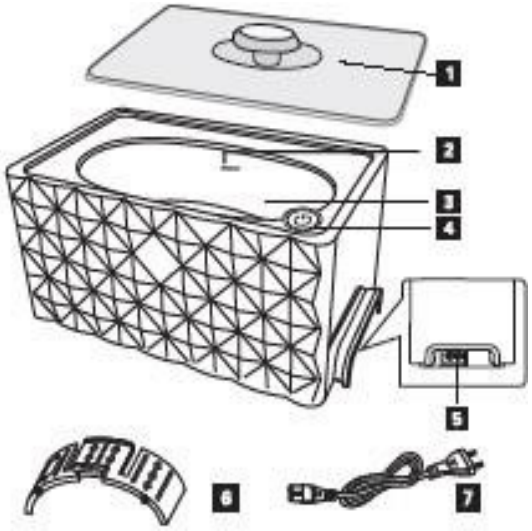

1. Lid

2. Maximum liquid level line

3. Stainless steel tank

4. On-off button

5. Power socket

6. Watch stand (optional) 7. Power cord

Storage and handling



1. Do not turn on the washer without water inside. Turning on the washer without water may damage the washer.
2. Do not overload the washer with continuous operation. After 20 minutes of continuous operation, leave the washer idle for another 10 minutes.
3. Do not leave water in the washer permanently. Pour the water or solution out of the washer after use. Leaving water or solution in the washer for a long time can damage it. Water should be poured out carefully, The exterior of the washer is not waterproof
4. Take care of the outside of the washer. Wipe off any residual water or solution immediately. Use a damp towel to clean the washer. Wipe dry after washing.
5. Do not expose the washer to direct sunlight. Store it in dry and cool and ventilated areas.

Instructions for use



1. Open the lid and place the items in the tank.
2. Fill the tank with water. The water must cover the objects to be cleaned, but must not exceed the maximum liquid level.
3. Close the lid, then plug the washer into the power supply. Press"⏻" , to start the cleaning process.
   Only turn on the device when the lid is on.
4. If you need to clean items longer, press"⏻" again . You can also press"⏻" while cleaning if you want to finish cleaning.
5. When cleaning is complete, unplug the washer from the power supply, remove the lid, and pour out the water in the direction shown by the arrow.

INSTRUCTIONS FOR USING OPTIONAL ACCESSORIES



Watch stand

Use the stand to keep the watch above the surface of the water when cleaning the bracelet.

CLEANING METHODS

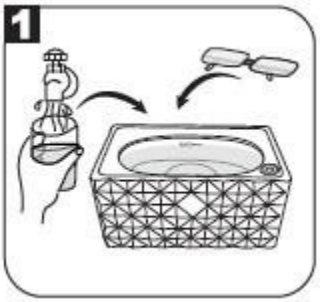

Ordinary washing

Open the lid. Put the objects into the washer tank. Fill the tank with water. The water must cover the items to be cleaned, but must not exceed the maximum liquid level. Then press t h e b u t t o n "⏻" button to start cleaning.



Cleaning solution

Prepare the cleaning solution according to the manufacturer's recommendations. Be careful not to exceed the concentration of the solution. This can damage the seals in the washer, with the consequent risk of flooding of electronic components. When you are finished, fill the washer with water, turn it on for 90 seconds, and then pour the residue out of the washer. This will prevent damage to the washer by prolonged contact with chemicals.

PRODUCTS UNSUITABLE FOR WASHING IN AN ULTRASONIC CLEANER

- Delicate jewelry (pearls, emerald, ivory items, beads, seashells, agate).
- Welded, coated and glued items
- Other items such as wood, coated glass, ceramic products, camera filters.

SAFETY MEASURES

1. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any service and repair work must be performed only by an authorized service technician.

2. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
3. Immediately unplug the device from the outlet and contact the authorized service in the following cases: (a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.

4. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.

5. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
6. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
7. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
8. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
9. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unsupervised when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then transferred to collection centers
Waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.