For service, contact the store where you
purchased the device.

INSTRUCTIONS FOR USE

GABBIANO STANDING INFRAZONE Y-707



Rev. A/04/2025

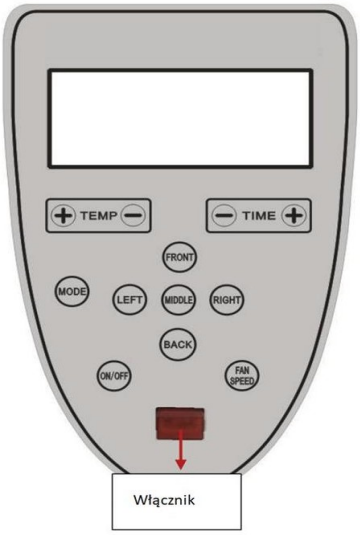



Wyświetlacz

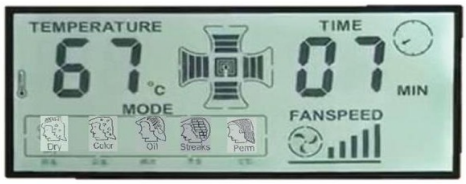

Opcje zabiegowe



Opcje	Temperatura	Czas / minuty
DRY	50°C - 80°C	8
COLOR		10
OIL		15
STREAKS		20
PERM		25

Drying option: dries hair quickly and effectively, reduces static and frizz. Leaves hair smooth and shiny without damaging it.
Color option: shortens the color treatment time and speeds up pigment absorption.
Regeneration option: the treatment promotes the absorption of products applied to the hair.
Balayage option: reduces the color treatment time and speeds up pigment absorption.
Perm option: shortens the color treatment time and speeds up pigment absorption.

Instructions for use:
Connect the power supply to an outlet corresponding to the voltage. 2-Press the ON/OFF switch to turn the device on.
3-Press the mode button to select the desired program (drying, coloring, treatments, streaks or perm). Press in sequence until you find the desired mode.
4- Once you have selected a mode, you can increase or decrease the time and temperature based on different procedures. (To increase, just press the (+) key, and to decrease, just press the (-) key.
5- The device has 5 heating panels: front, rear, middle, left and right. Each panel can be increased or decreased, according to the selected procedure.
6. To increase or decrease the fan speed, simply click the "FANSPEED" button one by one until the desired level is reached.
7. Turn off the "ON/OFF" switch when the operation is completed. 8- Store the equipment in a safe place

MAINTENANCE:

1 - The inner part of the unit gets dirty easily, so it should be cleaned periodically.
2- Caught hair or chemicals can cause malfunctions and become a source of unpleasant odors.
3- When chemicals, permanent agents or dyes come into contact with the equipment, use a damp cloth to clean it as soon as possible. Failure to do so may cause surface stains or discoloration.
4- Clean the control panel with a soft, dry cloth.
5 - If you spill water on this part, clean it as soon as possible. Water can cause electrical failure and damage the unit.

Model	Y 707
Function	Infrasound
Power	1500W~ 1800W
Voltage	110V-240V
Rated voltage	50~ 60Hz
Temperature	50-80 C
Time	0-60 min
Number of programs	5
Weight	15kg

Always follow basic safety precautions when using the device. Read all instructions before use.
1- This device is designed for use by properly specialized professionals.
2- Do not cover the device with any type of material during operation. Overheating may occur and cause fire, electric shock or other injury to persons.
3- Do not disassemble or attempt to repair the equipment. Disassembly, repair or modification should only be performed by a qualified technician. Attempts to disassemble, repair or modify may lead to abnormal accidents.
4- Do not touch working parts. Keep your hands and fingers away from the working sections, touching them may cause injury.
5- Keep the equipment dry. Do not clean parts of the main unit with wet cloths, etc. or allow water to come in contact with it. This may cause electric shock or malfunction.
6- Do not plug another electrical appliance into the same outlet.
7- Do not try to move the unit by pulling the power cord. This may cause it to fall and damage the cable.
8- Do not twist the power cord or place heavy objects on it. Twisting the cable or placing heavy objects on it may cause an electric shock or cause a fire.
9- Do not touch the power cord with wet hands. Doing so may cause electric shock.
10 - Unplug the device when it will not be used for a long time. Unplug the power cord at the end of the work day or when performing maintenance. Fires caused by short electrical circuits can be caused by insulation degradation. If the power cord is damaged, it must be replaced by the manufacturer or a similarly qualified person to avoid risks.
11 - Clean up any chemical spills immediately. When chemicals, solids or dyes come into contact with the equipment, clean them as soon as possible with a damp cloth. Failure to do so may result in staining or discoloration of the surface.
12 - Close supervision is required when the device is used by or near children, as well as people with limited physical and mental abilities. Do not leave the device unattended while it is plugged in.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician

.

3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service

in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.

5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet every time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to maintain an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment

Waste electrical appliances should be collected separately, and then handed over to collection points for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points

.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.