For service, contact the store where you
purchased the device.

INSTRUCTIONS FOR USE

Ultrasonic cleaner ACD-3840



Rev. A/03/2024

Technical data:

Model	CD-3840
Voltage	220 - 240 V 50Hz
Power	37 W
Vibration frequency	42 kHz
Dimensions	22.0 x 13.3 x 11.8 cm
Dimensions of container	16.8 x 10 x 5.6 cm
Tank capacity	700 ml
Minimum liquid level	200 ml
Maximum fluid level	600 ml
Weight	0.95 kg
Timer	90 - 480 s

1. Unplug the unit before filling. Do not exceed the "MAX" line to avoid overfilling.
2. Do not fill the tank with abrasive or corrosive chemicals. It may cause it to leak, resulting in damage.
3. Do not use the washer if the cable or plug is damaged. If damaged, contact a service center for inspection and repair.
4. Store the washer in a safe, dry and non-sunny place
5. The washer should never be left unattended while plugged in.
6. Do not use while bathing.
7. Disconnect the washer from the power source after use.
8. Do not immerse the washer in water to avoid electrocution 9. Pour the water through the arrow-indicated spot on the washer.

Washer construction and accessories:

1. Cover
2. Line of maximum liquid level
3. Tank
4. Time display
5. On/off switch
6. Time change key
7. Power cord
8. Basket (optional)
9. Watch stand (optional)

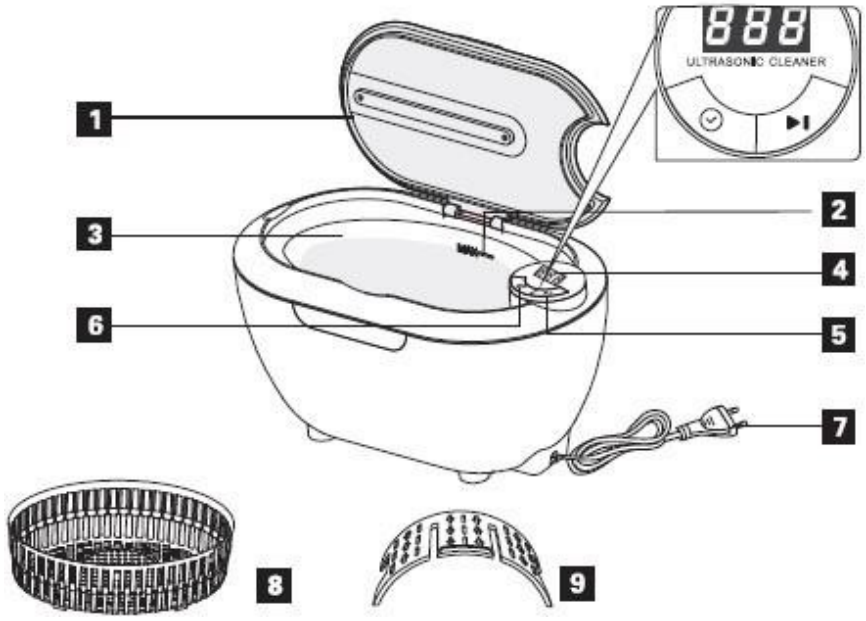

STORAGE AND HANDLING



1. Do not turn on the washer without water inside. Turning on the washer without water may damage the washer.
2. Do not overload the washer with continuous operation. After 30 minutes of continuous operation, leave the washer idle for another 10 minutes.
3. Do not leave water in the washer permanently. Pour the water or solution out of the washer after use. Leaving water or solution in the washer for a long time can damage it. The water should be poured out carefully, The exterior of the washer is not waterproof.
4. Take care of the outside of the washer. Wipe off any residual water or solution immediately. Use a damp towel to clean the washer. Wipe dry after washing.

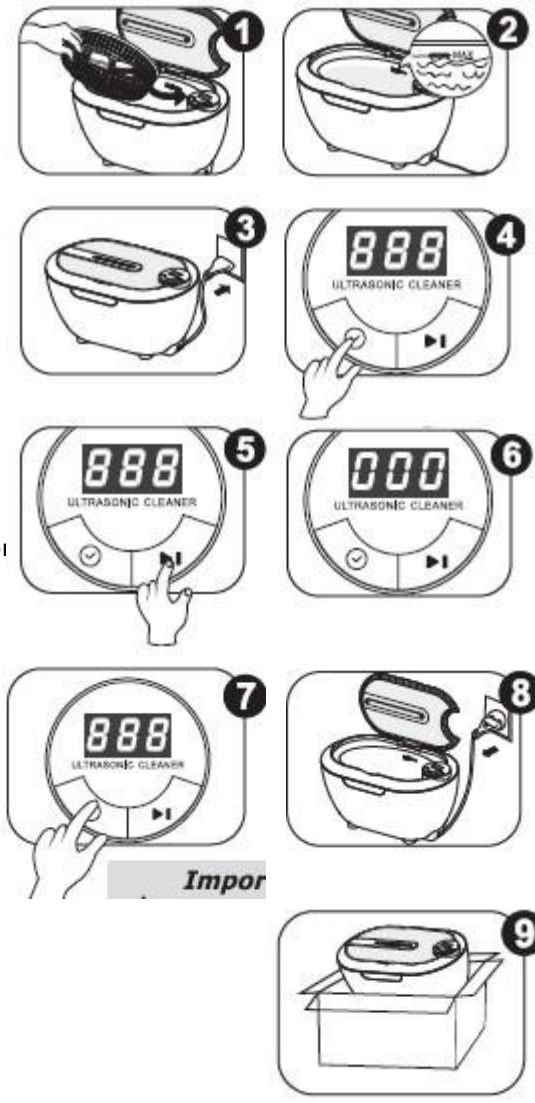

INSTRUCTIONS FOR USE

1. Open the lid. Put the products into the basket and then into the tank of the washer. In case of sharp objects that can damage the washer, be sure to use the basket. Also remember that the basket absorbs 30-40% of the ultraso energy of the washer.

2. Fill the tank with water. The water must cover the objects to be cleaned, but must not exceed the maximum liquid level.

3. Close the lid, and then connect the washer to the power supply. The display will show 180. This is the default cleaning time (given in seconds).

4. Set the selected time with the time setting key. Possible choices are 180s, 280s, 380s, 480s, 90s.

5. Turn on the washer with the switch. The cleaning process will start. The time will count down to 0.

6. When zero appears on the display, the washer will automatically finish its work

7. If you want to finish cleaning before time, press the On/Off button. If you need to repeat the cycle or want to increase the time, press the time setting button, select the appropriate time and press the switch to restart the device.

8. When you're done, unplug the device and pour out the remaining water and wipe the device dry.

9. Store in a dry and cool place.

CLEANING METHODS





Washers by prolonged contact with chemicals.

1. Ordinary washing

Use water according to the instructions for use. Pour out the water when finished.

2. Washing in solution

Prepare the cleaning solution according to the manufacturer's recommendations. Be careful not to exceed the concentration of the solution. This can damage the seals in the washer, resulting in the risk of flooding electronic components. When you are done, pour out the solution, fill the washer with water, turn it on for 90 seconds, and then pour the residue out of the washer. This will prevent damage

INSTRUCTIONS FOR USE OF OPTIONAL ACCESSORIES



The basket will work best for cleaning small items. Place the items in the basket, then insert it into the washer's tank. Try to make sure that the items do not come into contact with each other.



Use the stand so that the watch is above the surface of the water when cleaning the bracelet.

The pictures in the instructions are for illustrative purposes. They are intended to help explain the operation of the washer.

PRODUCTS NOT SUITABLE FOR WASHING IN THE ULTRASONIC CLEANER

- Delicate jewelry (pearls, emerald, ivory items, beads, seashells, agate).
- Welded, coated and glued items
- Other items such as wood, coated glass, ceramic products, camera filters.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetology personnel avoids undesirable consequences during treatment.

2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All service work and repairs must be performed only by an authorized service worker.

3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service in the following cases: (a) liquid has gotten into the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.

5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets i n t o the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise there is a risk of incorrect operation of the device its damage or even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment.
In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then transferred to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old devices contain full-value recyclable components, so they should be handed over for recycling. Therefore, they should be handed over to appropriate collection points.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.