For service, contact the store where you
purchased the device.


Instructions for use

Gabbiano standing infrazone 868-1



Rev. A/09/2025

Construction:

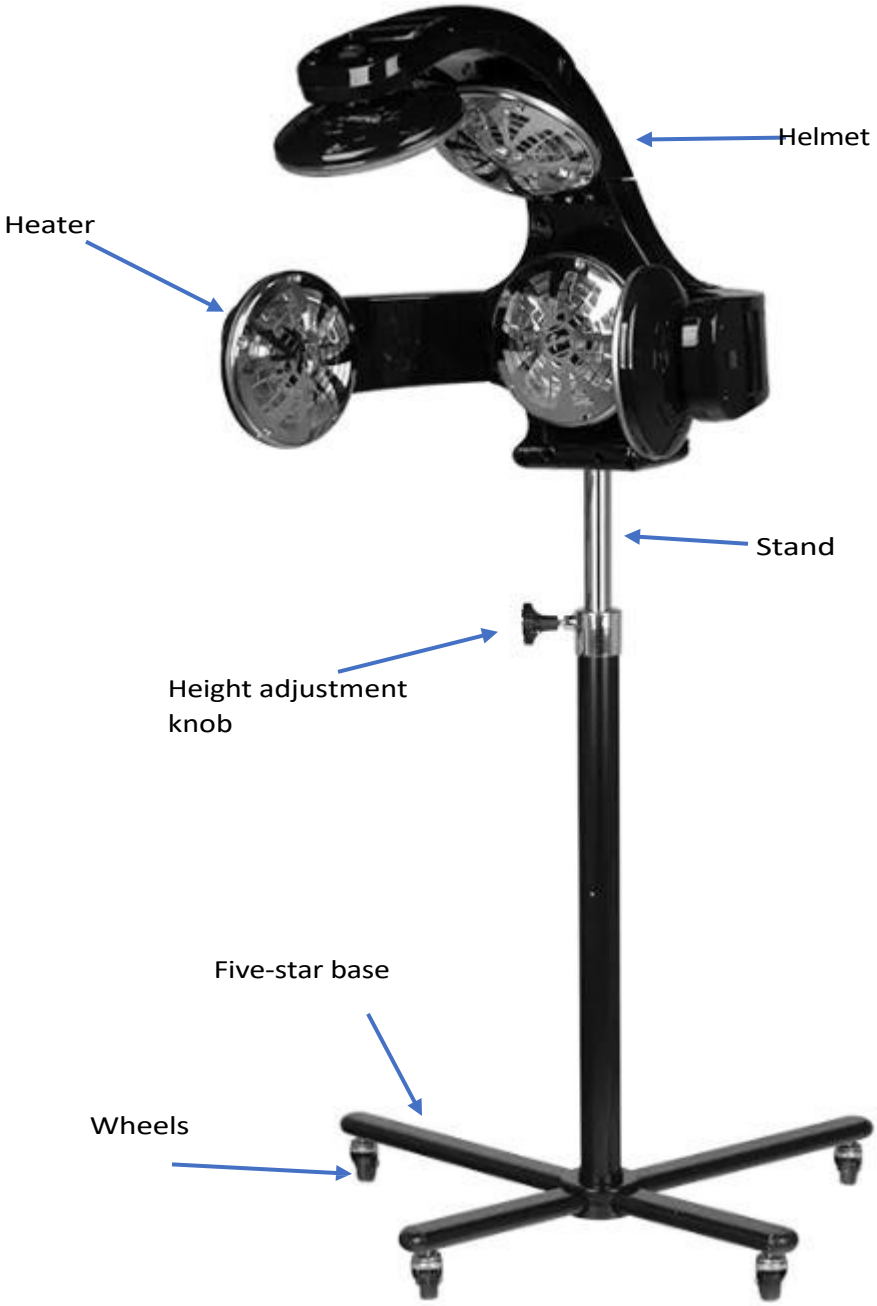

Attention!

- During the operation of the device, the temperature reaches high values. Do not touch the infrazone to avoid burns.
- Do not use on inclines, in humid conditions, on carpets with long hair or in crowded areas.
- If smoke escapes, breaks or other problems with the heater - immediately turn off the device and contact an authorized service technician.
- If the power cord is damaged, replacement must be done by an authorized service technician.
- Unplug the device after you have finished working with it.
- Do not throw or move the device violently.
- Keep the device away from water.
- Do not leave the device turned on unattended.
- Check the stability of the stand before each use.

Control panel:



- Plug the device into an outlet
- To start, use the red on/off switch (O/I)
- Select a mode ("MODE" on the control panel). Each mode is responsible for a function such as:
  "DRYING" - drying, "CARE" - grooming, "DYEING" - coloring, "BLEACHING" - bleaching, "STRIPPING PERM" - decolorization
- To increase or decrease the temperature, just use the buttons: "Temperature +" or "Temperature - "
- Use the "START/STOP" button to start the operation mode

Usage:

- Plug the power cord into a 220-volt outlet, turn on at the "On/Off" control - you will hear a beep.
- Press the "Hair Select" button. - There are three options for hair type (healthy / normal / damaged). Select the appropriate option; the screen will display the default corresponding mode, temperature and working time. Press the "Project Selection" button (Care / Perm / Hair).
- Press the "On/Off" button for the device to start working.
- During operation, you can adjust the time and temperature as needed using the buttons. "Time + / Time -" and "Temperature + / Temperature -".
- When finished, the fan will run for half a minute to prolong the life of the device.
- When finished, press the switch, the screen will turn off. Then disconnect the plug.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician.

3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service in the following cases:
   A. liquid has entered the device,
   B. the device emits a strange odor, smoke or makes strange sounds,
   C. the power cord has been damaged,
   D. the device has been overturned or its housing has been damaged.

5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center, this will avoid danger.
2. This appliance can be used by children at least 8 years old and by people with reduced physical and mental capabilities and people with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided on how to use the equipment in a safe manner, so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning waste used electrical and electronic equipment used electrical electrical equipment should be collected separately, and then handed over to collection points for used electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-)20°C to (+)40°C only in its original packaging. Store the device in a well-ventilated room and a relative humidity of no more than 90%. Operating temperature from (+)10°C to (+)40°C.
During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents