For service, contact the store where you purchased the device.

Instructions for use

Gabbiano standing sauna humidifier 658



Rev. A/08/2025

Construc tion:



Technical specifications:

- Two operating modes
- Time setting: 0 - 60 min
- Power 400/750W
- Power supply 230V
- Frequency 50Hz

Assembly:



1. Unscrew the plastic cover from the tripod (No. 1). Insert the tripod into the crossbar (No. 6), and tighten the tripod using the previously unscrewed cap.
2. Insert the item no.2 into the tripod (no.1)
3. Slide the base of the device (No. 7) into the component No. 2. Then screw in both water tanks: No. 4 from the top, No. 3 from the bottom.
4. Install the condensate container (No. 5) as shown in the illustration.



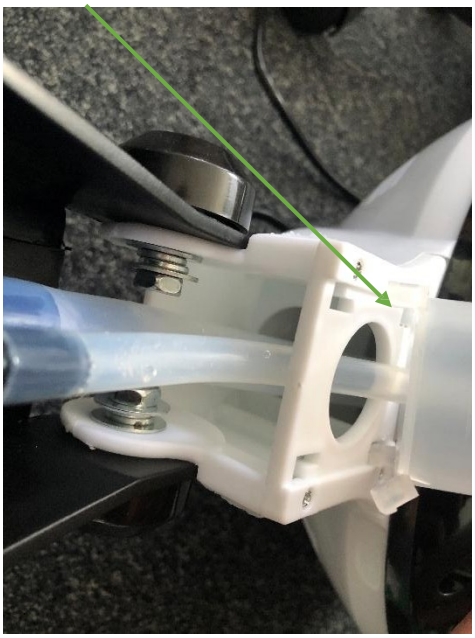

Control Panel:



NOTES:

- The tank must be filled with clean water before use, and any water left over from previous use should be drained.
- If steam does not come out during operation, turn off the device.
- The device has a water level sensor. When there is not enough water in the tank, the device will turn off automatically.
- The use of the device by children and persons with reduced physical, sensory or intellectual abilities, as well as those without knowledge or experience in the use of this type of equipment is possible provided that they are closely supervised and trained in the safe use and potential dangers of its use.
- The device and the power cord should be inspected regularly to rule out defects and damage. If the device shows signs of damage, stop using it immediately, turn off the power supply and have it repaired by an authorized service technician.
- The device must not be immersed in water or wet cleaned.
- The grille of the air outlet heats up during the operation of the dryer, this condition is determined by its operation.
- It is forbidden to interfere with the design of the device to change its parameters or construction.
- Cleaning and maintenance must not be performed by children.
- Do not use products with caustic and dye content, as well as oily products for cleaning the device. Inappropriate cleaning agents may cause material deterioration, corrosion or other phenomena. Wash metal and plastic surfaces with a soft cloth in lukewarm water (with a small amount of adapted liquids). Do not scrub, do not use harsh powders or solvents.
- It is recommended to disconnect the power supply when the device is not in use.
- The device heats up during operation. It is forbidden to touch any part of the device (except the control panel) when it is turned on, as it may cause burns.
- Holding the head in the steam chamber for too long may result in burns. In case of discomfort, stop the treatment immediately.

Attention.

The additional water container (No. 4) has a capacity equal to the maximum capacity of container No. 3. If you do not empty container No. 3 after the previous treatment and some water remains at the bottom, the water level will overflow when pouring water from container No. 4.

SECURITY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.

2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this m a n u a l . All servicing and repairs must be performed only by an authorized service technician .

3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.

4. Immediately unplug the unit from the outlet and contact an authorized service center in the following cases: a) liquid has gotten into the unit, b) the unit emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the unit has been knocked over or its housing has been damaged.

5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.

6. For safety purposes, unplug the power cord from the outlet every time you finish working with the device.

7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.

8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.

9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).

10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.

2. This appliance can be used by children at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.

3. The device is not intended for play by children. Do not allow children to play with the device.

4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.

5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical equipment
electrical appliances should be collected separately, and then handed over to collection centers for used electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points

.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.