For service, contact the store where you purchased the device.

Instructions for use

Gabbiano Bali Wash Bench




Rev. A/10/2025


Technical data:


- Rated voltage: 220 V
- Rated frequency: 50 Hz
- Water pressure: 0.1–0.6 MPa
- Water temperature: 30–55°C

Installation:

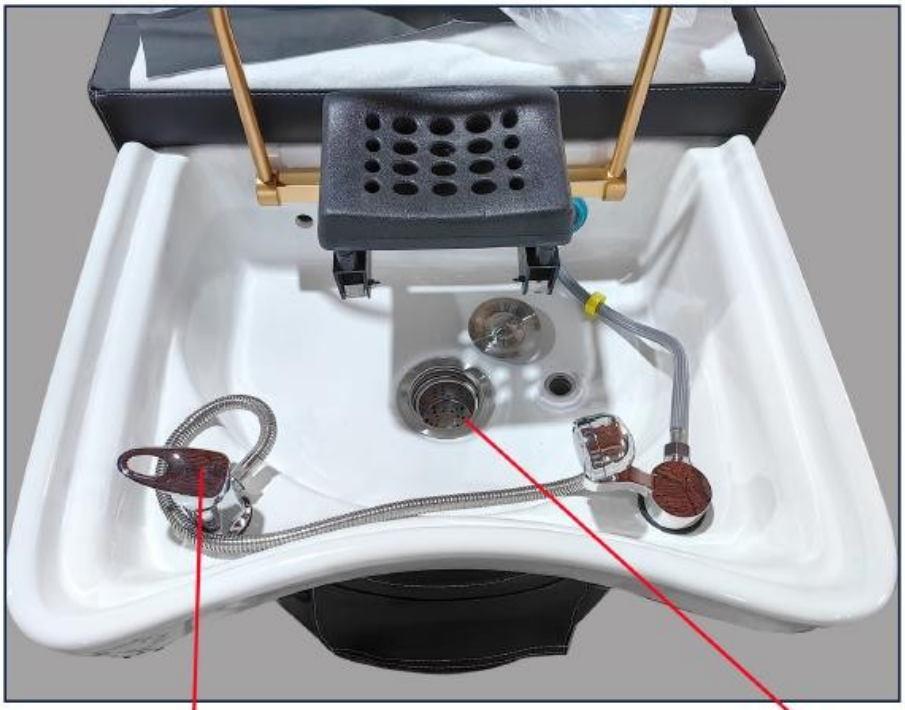

- **Before connecting the water and cables, connect the drain pipe to the lower drain hole of the washbasin.**
- **The diameter of the is 3 cm**

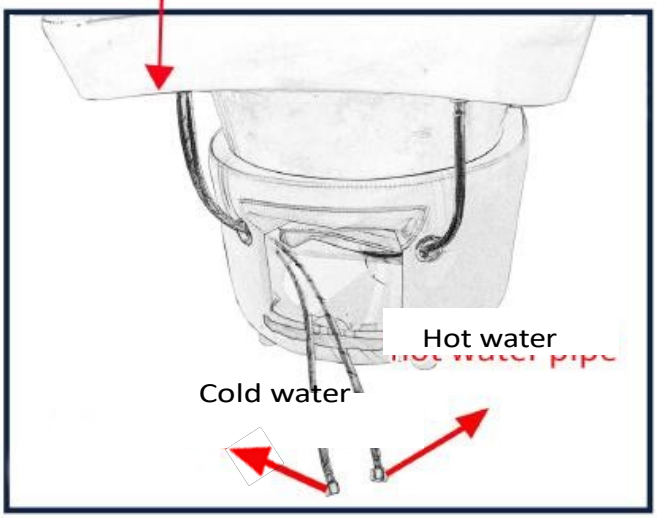

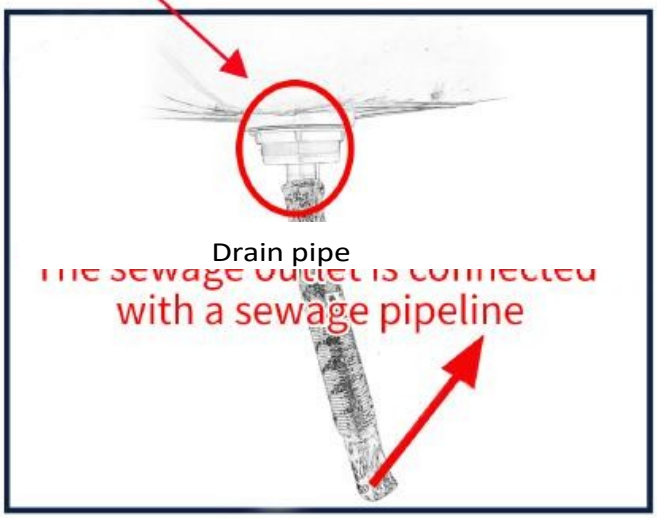

1. Connect the hot and cold water hoses to the water supply.
2. Install the drain pipe as shown in the illustration.

Hair moisturizing treatment:

1. Unscrew the cap and then install the long cap facing outwards in the bowl opening.



2. The long hose is connected to the steam generator, and the short hose is connected to the hair washing bowl and connected to the diffuser located under the headrest.



3. To avoid boiling over, pour in 1–1.5 liters of water and cover the device with the lid. The treatment should not exceed 30 minutes.



4. Finally, place the lid on the hair washing bowl. The treatment is ready to be performed.



CAUTION:

- Do not pour any substances other than water into the steam generator.
- Be careful not to burn yourself, as the steam temperature is very high.
- Initially, set the temperature to 9. Once the water has boiled, adjust the temperature to 4–5.

Control panel:



Time + - increases the duration of the treatment **Time –** - decreases the duration of the treatment **Spa start** – starts the water flow

Spa mode - adjusts the intensity of the spray **Temperature+** - increases the water temperature **Temperature-** - decreases the water temperature **Cleaning start** – starts cleaning

Light therapy – turns on the lighting

Frequently asked questions:

1. What to do if the water is not circulating or the pressure is too low?

- Make sure that the water level is 5 cm above the filter

2. What should you do if the bowl drains poorly or does not drain at all?

- Open the filter cover and remove any accumulated hair or other debris. Remember to clean the filter regularly.

3. What to do if there is no water circulation?

- The cable may be connected incorrectly. Check the user manual and correct the cable so that it is connected correctly. If the problem persists, contact customer service.

Warning!

1. Check that the voltage corresponds to the device specifications.

2. Do not use wet hands to connect or disconnect the power source.

3. Do not damage the wiring or tamper with the circuit.

4. Do not use a wet cloth to clean the power switch, plug, and other electrical parts of the device.

6. Ensure that children do not play near the lounger without adult supervision.

7. Do not put your hands or feet in the gaps in the lounger.

8. Make sure that the plug is fully inserted into the socket, otherwise it may cause electric shock or fire due to overheating.

9. In case of malfunction or failure, stop using the product immediately and disconnect the power supply.

10. Do not expose the lounger to direct sunlight.

11. Do not push or pull the lounger on uneven floors.

12. Do not stand on the lounger.

13. Before leaving the recliner, return the backrest to its highest position.

14. Do not place the device in damp areas such as bathrooms to avoid electric shock or other malfunctions. The remote control should also be protected from contact with water.

15. Do not place the device in areas where painting, varnishing, or oxygen is used.

16. The device should not be used by persons with physical limitations, sensory impairments, mental problems, or lack of experience.

17. If the plug is damaged, contact your distributor, service center, or qualified personnel to avoid danger.

Warning!

The bed has a closed water circuit. In order to maintain cleanliness and full functionality of the device, after each treatment, remove the used water and rinse the circuit. To do this, drain the used water from the bowl, then fill the bowl with clean water and turn on the device for several dozen seconds. Repeat this step twice. After the treatment, it is recommended to wash a n d wipe dry any parts that are sensitive to water or the agents used during the treatments. Failure to do so may result in damage to the bed, such as damage to the seals or mold growth.

SAFETY MEASURES

1. The device is professional equipment for use in beauty salons. The device should only be operated by qualified beauty salon staff to avoid undesirable effects during treatment.

2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this user manual. All service and repair work must be performed exclusively by an authorized service technician.

3. Do not install or operate the device near liquids, wet areas, or with wet hands, so that no liquids can get into the device.

4. Immediately unplug the device and contact the authorized service center in the following cases: a) liquid has entered the device, b) the device emits a strange odor, smoke, or strange noises, c) the power cord has been damaged, d) the device has been knocked over or its casing has been damaged.

5. Do not place any objects on the cables. Do not install the device in places where someone could step on the power cord.

6. For safety reasons, unplug the power cord from the outlet after each use.

7. Do not insert anything into the opening in the device. If a foreign object gets into the opening, unplug the cord from the outlet and contact the distributor or manufacturer.

8. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.

9. To ensure the specified service life of the device, it is recommended to wait one minute before pressing the power button again (between switching on and off and vice versa).

10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of the device malfunctioning, becoming damaged, or even burning out.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center to avoid danger.

2. This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way so that the hazards are understood.

3. The device is not intended for use by children. Children must not be allowed to play with the device.

4. Do not leave the device unattended when children or persons who do not have sufficient knowledge of how to use the device are in its vicinity.

5. This electrical device is not a toy. Incorrect use or contact with the electrical device may pose a risk to health or lead to death, so the device must be used and stored out of the reach of children.



DISPOSAL OF THE DEVICE

Used electrical equipment, instruments, and packaging should be taken to recycling centers in accordance with environmental protection regulations. Electrical equipment should not be disposed of in household waste containers. Follow the rules for disposing of this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EU on waste electrical and electronic equipment, used electrical equipment should be collected separately and then taken to collection points for waste electrical and electronic equipment.

At the end of their useful life, old appliances contain valuable recyclable components, so they should be taken to appropriate collection points for recycling.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (–) 20 °C and (+) 50 °C exclusively in its original packaging. Store the device in a well-ventilated area with relative humidity not exceeding 75%. Operating temperature range: (+) 10 °C to (+) 40 °C. During storage and transport, do not throw or drop the device, expose it to mechanical shocks or atmospheric factors.